
APP instructions




(PS: There are 5 working periods available to be set.)

Amend password

password is 8888

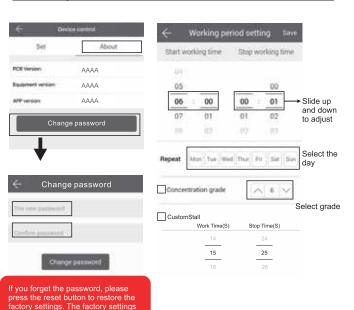

Time setting



Power on/off

Connect power supply, power on with a sound " beep", a nd the screen displays initial time and current grade. The screen will be off when disconnect the power.

Fan on/off

Touch ▲ button (3s) to turn on fan, touch ▼ button (3s) to turn off fan.

Auto-lock and un-lock

Button will be locked automatically if there is no any further manual manipulation in 60s; Touch SET (about 5s) comes out with sound "beep" and screen lights on to unlock machine.

Local time setting

Touch SET button (about 3s) till a sound "beep" comes out for day setting; touch ▲ or ▼ to adjust the day; touch ENT button for local time setting, touch ▲ or ▼ to adjust the time (Figure 1)

Concentration grade setting

There are 20 grades available. Touch ▲ to increase grade, touch ▼ to decrease grade(Figure 2).

SET A SET A

Work time period setting

There are 5 working periods available to be set every day (Figure 3).

Touch SÉT button to set working period (ON1), touch ▲or▼ to choose working period (1-5); touch ENT button for the working period switch, touch ▲or▼ to choose ON or OFF, touch ENT button again to move to the operation time, touch ▲or▼ to adjust number.

Touch ENT again for grade. Next touch ENT to choose the day (MON), touch ▲ button to turn on the working period (ON1) (Figure4), touch ▼ button to turn off the working period (OFF1) (Figure5).


Touch ENT to move to the next day and repeat the steps for TUES to SUN.

Once finish, touch SET to confirm and exit, Repeat the same setting steps of ON1 for ON2, ON3 ON4 and ON5. PS:Grade display with "-Cu-" is for customized grade set by APP only(Figure6).


Machine doesn't work when the start working period is as same as stop working time

ame as stop working time							
Working	00:00	00:00	00:00	00:00	00:00		
time period	00:00	00:00	00:00	00:00	00:00		
Mon	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF		
Thues	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF		
Wed	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF		
Thur	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF		
Fri	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF		
Sat	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF		
Sun	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF		

(PS: The first working period is factory defaults with start working time 07:00 and stop working time 19:00, Grade1, the rest are all with 00:00.)

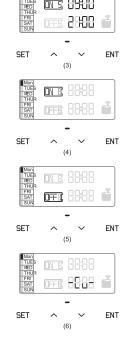



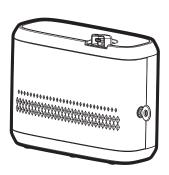

Concentration and Consumption

	143	intervals(s)	Consumption(ml/h)			
Grade	work(s)		A305S-BLE	A305M-BLE	A305L-BLE	
G1	15s	300s	0. 10	0. 1	0. 2	
G2	15s	150s	0. 14	0. 2	0. 3	
G3	20s	120s	0. 18	0. 3	0. 5	
G4	20s	85s	0. 22	0. 4	0. 6	
G5	25s	80s	0. 26	0. 5	0.8	
G6	30s	75s	0. 30	0. 6	0. 9	
G7	30s	60s	0. 34	0. 7	1. 0	
G8	30s	50s	0. 38	0.8	1. 2	
G9	30s	40s	0. 45	0. 9	1. 3	
G10	30s	33s	0.50	1.0	1. 5	
G11	33s	30s	0.55	1.1	1. 8	
G12	40s	30s	0.60	1.2	2. 0	
G13	50s	30s	0.65	1.3	2. 3	
G14	60s	30s	0.70	1.4	2. 5	
G15	75s	30s	0.75	1.5	2. 8	
G16	80s	25s	0.80	1.6	3. 0	
G17	85s	20s	0.85	1.7	3. 3	
G18	120s	20s	0.90	1.8	3. 5	
G19	150s	15s	0.95	1.9	3. 8	
G20	300s	15s	1.00	2.0	4.0	
Cu	5-500s	5-500s				

▲ Up grade

Down grade

Notice:1. Above date is base on test trial.

 Consumption data is for reference only. Different fragrance may be coming with different consumption.

Specification

Model] : A305S-BLE A305M-BLE A305L-BLE [Coverage] : 200m²/600m³ 400m²/1200m³ 800m²/2400m³


[Dimension] : 295*222*112.5mm Bottle j : 850ml

Weight : 2.1kg

: 6W /6W / 9W

: DC12V Voltage





Usage of sealing tape:

1.Before replacing atomizing core, wrap sealing tape around atomized


core thread about 3-5 turns to avoid air leakage;

2. Before connecting atomized connector, wrap sealing tape around atomized connector thread about

3-5 turns to avoid air leakage.


Installation

The method of using expansion bolts




Drill the wall, insert the expansion tube into the hole, put the screw into the expansion tube and tighten it

Installation steps



- 1. Aim at the position of the mounting bracket, then drill the hole in the wall and insert the expansion bolts into the hole in the wall:
- 2.Install the mounting bracket on the wall with screws, and finally hang the machine on the mounting bracket.

Overview




Instruction




- 1. Open the door by key
- 2. Unscrew the atomized nozzle, take out the bottle
- 3. Twist the bottle and fill essential oil
- 4. Put atomized head to bottle and screw the atomized nozzle
- 5. Finish time setting and lock machine

Direction

Idea for Hotels, Conference rooms, Malls, Exhibition halls, Major retailers, Bars, SPAs, Business places or anywhere you wanto a fragrance experience.





Caution




🙌 Shall not modify, disassemble or repair the machine arbitrarily. Any failure happens, please contact technician in time.



Shall not damage the power cord, force to bend, yank, heavy load, clip or reprocess reprocess.



- Shall not use damaged plug or unmatched with the socket;



- Shall not use overloaded power socket, wire or broken plug.




Shall not touch the wire or product shell when thundering or/and





Shall not disassemble the machine when it is under operating.

Warning

- 1. Please keep the machine vertical. Tilt or lie flatly may cause oil over flow. The machine efficiency may be affected.
- 2. Shall not modify, disassemble or repair the machine if you are not a technician. If any failure happens to the machine, please contact our technical personnel.











Troubleshooting

Before asking to have the machine repaired, please try to diagnose the problem first following to below instructions.

Breakdown	Solution
Does not diffuse	-Check whether the mode you choose is correct or not. -Check if the machine is during "Non-Working period" -Air pump may be damaged, change a new one. -Check whether the tube is loose or not
Weak diffuse	-The atomizing core is blocked, clean by alcohol or change a new component. -Check whether the gasket is damange/loose or not. -Check whether the tube is loose or not
Oil leaking	-Check whether the bottle is loose or not -The gasket in the atomized head is damaged or
Oil sprinkle	-The atomized head is damaged, change a new one -The machine is tilled or lie down, keep the machine
Abnormal noise	-The air pump is loose, retighten the pump -The air pump is damaged, change a new one.

Equipment cleaning

The machine needs to be cleaned when below situations happen:

- 1. You're about to change to another kind of essential oil.
- 2. The atomization volume becomes weak .

Cleaning steps:

- 1. Pull out the atomized head, loose the bottle.
- 2. Find a larger container and fill the industrial alcohol up, then soak the atomized head and the bottle for 5-10mins.
- 3. Airing the atomized head and the bottle.